

SAMSUNG

Vari-focal Anti-Vandal Dome Camera **User's Guide**

SCC-B539X



ENG

GER


FRE

SPA

ITA

TUR

Safety Precautions

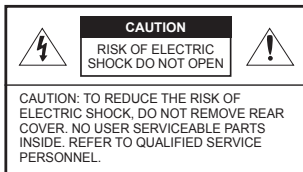

This symbol indicates high voltage is present inside. It is dangerous to make any kind of contact with any inside part of this product.



This symbol alerts you that important literature concerning operation and maintenance has been included with this product.

To prevent damage which may result in fire or electric shock hazard, do not expose this appliance to rain or moisture.

WARNING

1. Be sure to use only the standard adapter that is specified in the specification sheet. Using any other adapter could cause fire, electrical shock, or damage to the product
2. Incorrectly connecting the power supply or replacing battery may cause explosion, fire, electric shock, or damage to the product.
3. Do not connect multiple cameras to a single adapter. Exceeding the capacity may cause abnormal heat generation or fire.
4. Securely plug the power cord into the power receptacle. Insecure connection may cause fire.
5. When installing the camera, fasten it securely and firmly. A falling camera may cause personal injury.
6. Do not place conductive objects (e.g. screwdrivers, coins, metal things, etc.) or containers filled with water on top of the camera. Doing so may cause personal injury due to fire, electric shock, or falling objects.
7. Do not install the unit in humid, dusty, or sooty locations. Doing so may cause fire or electric shock.
8. If any unusual smells or smoke come from the unit, stop using the product. In such case, immediately disconnect the power source and contact the service center. Continued use in such a condition may cause fire or electric shock.

9. If this product fails to operate normally, contact the nearest service center. Never disassemble or modify this product in any way. (SAMSUNG is not liable for problems caused by unauthorized modifications or attempted repair.)
 10. When cleaning, do not spray water directly onto parts of the product. Doing so may cause fire or electric shock.
8. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
 9. The Mains plug is used as a disconnect device and shall stay readily operable at any time.

CAUTION

1. Do not drop objects on the product or apply strong shock to it. Keep away from a location subject to excessive vibration or magnetic interference.
2. Do not install in a location subject to high temperature (over 122°F), low temperature (below 14°F), or high humidity. Doing so may cause fire or electric shock.
3. If you want to relocate the already installed product, be sure to turn off the power and then move or reinstall it.
4. Remove the power plug from the outlet when there is a lightning. Neglecting to do so may cause fire or damage to the product.
5. Keep out of direct sunlight and heat radiation sources. It may cause fire.
6. Install it in a place with good ventilation.
7. Avoid aiming the camera directly towards extremely bright objects such as sun, as this may damage the CCD image sensor.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received including interference that may cause undesired operation.

Note

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus.
13. Unplug this apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or been dropped.

Contents

Overview.....	6
About this guide	6
Product overview.....	6
Main features	6
Components.....	7
Checking components in the package	7
Components of your camera	8
Installation.....	9
Setting switches	9
Setting function switches.....	9
Connecting cables and changing the settings	11
Installing camera	12
Before installation.....	12
About the installation holes	12
Installing on a pipe	13
Installing the camera on the ceiling.....	15
Disassembling/assembling the Main body from the Case	16
Adjusting the camera direction.....	17
Appendix A: Specifications for NTSC Standard	18
Appendix B: Specifications for PAL Standard	19

Overview

About this guide

This user guide includes basic instructions for the product. It is recommended that all users read this guide before use.

This guide is divided as follows:

- Chapter 1, "Overview," introduces the user guide and product related information. (This chapter)
- Chapter 2, "Installation," explains how to set and install the product.
- Appendix, "Specifications," provides the specifications of the product.

Product overview

This anti-vandal dome camera provides the superb monitoring features in bank and business areas and it is a water-proof and vibration-proof camera, which can strongly endure an external impact. This vari-focal camera provides the digital noise reduction (DNR) and real-time CCD defect correction features for implementing a clear image.

Main features

- Power: DC 12V/AC 24V
- Special functions
 - Line lock (LL) control
 - Auto white balancing
 - Horizontal/vertical image reversing
 - Flickerless control
 - Low shutter speed control
 - Backlight compensation control
 - Automatic switching between color and black & white modes
 - Equipped with vari-focal lens
 - Auto Iris function
 - Digital noise reduction (DNR)
 - Dynamic CCD defect compensation

Components

Checking components in the package

Please check your camera and accessories are included in the package. Those components are as shown below:









Camera



Test Monitor Cable



User's Guide


Image	Part name	Standard	Quantity	Usage
	Plastic anchor	HUD 5	4 (EA)	Attach each piece to screw connection holes for strengthening connection
	ASSY screw machine	BH M5 X L6. (White+o-ring)	8	Used for filling in the holes when installing pipe and wall mount
	ASSY screw tapping	TH M4xL30 (Black+o-ring)	4	Used when installing your camera on the ceiling or wall
	L-Wrench	TROX T-20	1	Used for assembling/ disassembling the Dome cover
	Template		1	Used for guiding the installation
	Gasket-pipe hole	T2.5 W56	1	Used to make a wiring hole when installing the camera on the ceiling or wall

Note

The test monitor cable is used to test the camera by connecting to a portable display. If you really want to connect the camera to a monitoring display, use the BNC cable.

Components of your camera

Your camera has the following components:

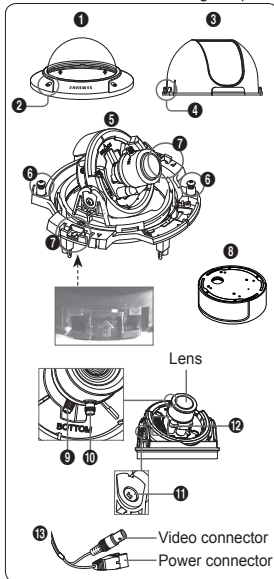


- 1. Dome cover:** Covers the inner cover, lens, and main body to protect them.
- 2. Cover screw:** Use it to assemble or disassemble both dome cover and case.
- 3. Inner cover:** Covers the main body to protect it.
- 4. Wing locker:** Push a long thin screwdriver into its narrow spot and press it outward when you want to remove the inner cover.
- 5. Main body:** Includes a lens, a switch board, a PCB board, screws, and such.
- 6. Screws for assembly and disassembly:** Using these 2 screws, the Main body is closely connected to the Case.
- 7. Hooker:** By pulling the left/right levers in the arrow direction, the Main body can be detached from the Case.
- 8. Case:** Used as a ceiling or wall fixture. It is fixed using four screws provided in the package.
- 9. Zoom lever:** Using this lever, the lens zoom can be adjusted and fixed.
- 10. Focus lever:** Using this lever, the lens focus can be adjusted and fixed.
- 11. Tilt fixing screw:** Using this screw, the slope of the lens can be adjusted and fixed.
- 12. Switch board:** Includes two kinds of control switches such as function switches and phase-control switches. The board has eight function switches in the middle and two phase-control buttons on each side of the function switch area.
- 13. Cable:** Connect the Video connector to BNC cable and Power connector to power adapter.

Installation

Setting switches

Setting function switches

To set the available functions on your camera, adjust eight switches as shown below:

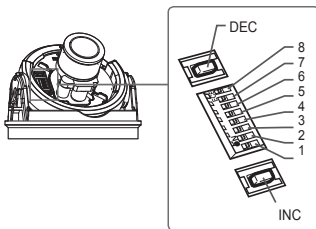

No	Name	Brief description
1	LL	Line lock ON/OFF
2	LSS	Sens-up or Low speed shutter ON/OFF
3	H-REV	Horizontal reverse ON/OFF
4	V-REV	Vertical reverse ON/OFF
5	BLC	Backlight compensation ON/OFF
6	FL	Flickerless ON/OFF
7	D/N	Automatic switching between color and black & white ON/OFF
8	AWB	Automatic white balance ON/OFF

- Switch 1 (LL):** When this switch is set to **OFF**, the camera operates in the internal synchronization mode, while when it is set to **ON**, the camera operates in the line lock mode.

In the internal synchronization mode, the camera always uses an inside crystal oscillator for synchronization. However if multiple cameras are connected to a sequential switcher, picture rolling or flickering may occur when switching from one camera to another. In this case, you can set this switch to **ON** to solve this problem.

The line lock mode allows the camera to use the phase of the AC power as the synchronization reference. In this mode, you can use the phase control buttons(INC/DEC).

Note

When you are using the DC 12V power, set this switch to **OFF**. The line lock feature will not normally operate even when the switch is set to **ON**.

Set the LL switch to ON while the AC power is connected. If any picture roll happens, you have to adjust the phase using the phase-control buttons. Press the INC or DEC button to increase or decrease the phase by one degree.

2. **Switch 2 (LSS):** This sens-up mode accumulates the image fields in memory to reduce noise but increase the brightness and contrast rate. When this switch is set to **ON**, the camera automatically switches to a maximum of 128 times of image acquisition speed to implement a clear picture for darker image.
3. **Switch 3 (H-REV):** When this switch is set to **ON**, the camera image is reversed horizontally. If you want to monitor your site using a mirror, you can use this feature to see the right image.
4. **Switch 4 (V-REV):** When this switch is set to **ON**, the camera image is reversed vertically. If your camera reluctantly displays the vertically reversed image, you can use this feature to see the right image.
5. **Switch 5 (BLC):** When this switch is set to **ON**, you can view a clear image even though the camera faces any excessive light such as sunlight and fluorescent light. When it is set to **OFF**, the subject with excessive light is not clearly shown.


6. **Switch 6 (FL):** When this switch is set to **ON**, the shutter speed is fixed to 1/100 sec (for NTSC) or 1/120 sec (for PAL) to prevent screen from flickering by the disaccordance between vertical synchronous frequency (50Hz for NTSC, 60Hz for PAL) and on-and-off frequency of a light.
7. **Switch 7 (D/N):** When this switch is set to **ON**, the camera automatically switches between color and B&W according to the brightness of the vicinity.
8. **Switch 8 (AWB):** This switch adjusts white balancing. When this switch is set to **ON**, this camera operates in ATW mode, and in case of **OFF**, this camera operates in AWC mode.
 - ATW (Auto Tracking White Balance): The color temperature is automatically adjusted according to the environmental change. (Approx. 2000°K to 11,000°K)
 - AWC (Auto White Balance Control): It stores the color temperature just when the switch is changed to **OFF**. Accordingly color temperatures are adjusted by the stored value.

Caution

- The IRIS setting range for the camera is approximately 80 to 120 IRE. It means the camera does not provide the IRIS full open/close feature but the restricted variation range.
- Use the camera after setting to the proper level (80 IRE or above) because the IRIS hunting may occur when the level is 75 IRE or below.

■ Connecting cables and changing the settings

Before installing your camera, you have to adjust the lens focus, zoom, and switch settings.

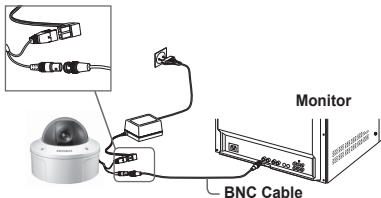

To connect cables

1. Connect the BNC cable to the Video connector attached on your camera.
2. Connect the BNC cable to the Video Input on a monitor.
3. Connect the power adapter to the Power connector attached on your camera. When the monitor is turned on, the camera image appears.

To adjust the lens focus, zoom, and function settings

1. Remove the Cover dome and Inner cover. For more details about the removing procedures, see "Installation procedure," in the Installing camera section on the next page.
2. Adjust the focus, zoom, and function settings of your camera using the Focus lever, Zoom lever, and Switch board while you are viewing the image on the screen.
3. If you want to fix the adjusted focus and zoom, screw up the levers.

■ Installing camera


Before installation

Before installing your camera, you have to read the following cautions:

- You have to check whether the location (ceiling or wall) can bear five times the weight of your camera.
- Don't let the cable to be caught in improper place or the electric line cover to be damaged. Otherwise it may cause a breakdown or fire. You can use wall mount adaptor (SADT-102WM), and pole mount adaptor (SADT-100PM) for installing the camera on the wall or pipeline.
- When installing your camera, don't allow any person to approach the installation site. If you have any valuable things under the place, move them away.

About the installation holes

Bottom of camera

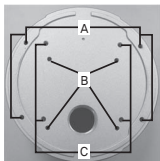

A: Use these holes when directly installing your camera on the ceiling or wall.

- ✖ While those are not used, fill in the holes using the screw machine (M5 X L6.) for waterproofing.

B: Use four holes when directly installing your camera on the junction box

- ✖ You can use the 4 1/8 diameter round type junction box for assembly. (The junction box, gasket, and cover are separately purchased items.)

C: Use these holes when installing the wall mount adaptor (SADT-102WM)

- ✖ While those are not used, fill in the holes using the screw machine (M5 X L6.) for waterproofing.

The holes that are not used should be tightly sealed up using the screws provided for waterproofing. When the screws don't have rubber rings inside or are not closely attached, note that it can cause waterproofing problem. For attaching screws, see page 16
"Disassembling/assembling the Main body from the Case."

Installing on a pipe

Before installation, you have to be familiar with the above cautions and fill in the holes that are not used for installation.

To install your camera bottom on a pipe

1. After connecting the power and video cables, throw them inside the pipeline and screw the male thread pipe into the female pipe thread in your camera tightly to fix the **Main body**. (In this case, be sure to tape with Teflon tape before assembly for waterproofing. Be careful for the wiring cable not to be stuck in the connection area.)



3. Attach the Dome cover. (Screw the connection bolts tightly using the L-Wrench provided for waterproofing.)

※ To change the SAMSUNG logo position, move the location of the connection rubber band as show below and rotate for assembly. (The rotation limit is 180 degree.)



2. Adjust the angle of the camera in search of a better view.

- 1) Separate the Dome cover using the L-Wrench provided. (To make loose the screws, rotate counterclockwise.)



- 2) Adjust the lens direction. For more information, see page 17 "Adjusting the camera direction."

To install the camera side on a pipe

1. Pull the power and video cables through the pipe connection hole on the camera side
 - 1) Remove the side cover from the **Case** using a coin or minus (-) driver. (Rotate counterclockwise.)



- 2) Push the power and video cables stretched outside of the bottom hole into the **Case**. And pull them out from the side cover of the Case.



2. Attach the removed side cover to the bottom hole and rotate it clockwise using a coin or minus (-) driver. (Be sure to insert the O-ring (P22 T2.4) into the hole before assembly. The ring is necessary for waterproofing.)



3. After pulling the power and video cables through the connection pipe, screw the male thread pipe into the female pipe thread in your camera tightly to fix the **Main body**. (In this case, be sure to tape with Teflon tape before assembly for waterproofing. Be careful for the wiring cable not to be stuck in the connection area.)



4. Adjust the lens direction. For more information, see page 17, "Adjusting the camera direction."
5. Attach the **Dome cover**. For more information, see step 3 in "To install your camera bottom on a pipe" on page 13.

Installing the camera on the ceiling



Before installation, you have to be familiar with the above cautions and fill in the holes that are not used for installation.

To install your camera bottom on a pipe

1. Attach the provided template to the place to be installed and penetrate a hole (5mm diameter, minimum depth 35mm) for fixing your camera to insert the provided plastic anchor (HUD 5) to the full.
2. After connecting both power and video cables, put them in order not to have damage during installation.
3. Remove the Dome cover. For more information, see step 2 in "To install your camera bottom on a pipe" on page 13.
4. Install your camera. After aligning the hole where the plastic anchor is inserted with the camera installation hole, make tight four ASSY screw-tappings where O-rings are inserted. (If no O-rings are inserted, water leak may happen.)
5. Adjust the camera lens direction. For more information, see page 17, "Adjusting the camera direction."
6. Attach the Dome cover. For more information, see step 3 in "To install your camera bottom on a pipe" on page 13.

In case of wiring after penetrating a hole on the installation site


- ① Penetrate a wiring hole toward the pipe. (Recommended hole size: within 30mm diameter)
- ② Attach the gasket on the bottom of the product as shown below. You have to correctly align the hole with the pipe hole.
 - × If the hole deviates from the gasket, water leak may happen.

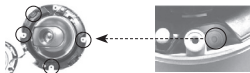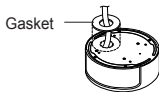

Disassembling/assembling the Main body from the Case

The holes that are not used should be tightly sealed up using the screws provided for waterproofing. To detach the Main body from the Case, follow the instructions below:

1. Remove the **Dome cover** first.
2. Detach the **Main body** of the camera from the **Case**.
 - 1) Make loose two screws by rotating counterclockwise.
 - 2) Detach the **Main body** of the camera after unlocking by pulling the left and right levers in the arrow direction.
3. Assemble the **Main body** of the camera with the **Case**. (Align three alignment grooves of the Main body with the bumps of the Case and assemble them.)

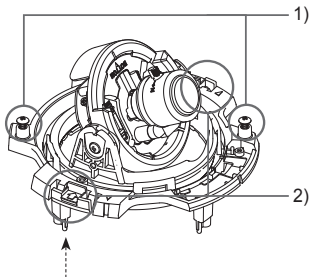

4. Attach the **Dome cover** using the L-Wrench. For more information, see step 3 in "To install your camera bottom on a pipe" on page 13.


■ Adjusting the camera direction

When the camera is fixed on the ceiling, you can adjust the camera viewing angle. You can rotate your camera leftward or rightward (Panning), and can change the slope of your camera upward or downward (Tilting).


In case of panning, the rotation limit of your camera is set to 355 degree (100 degree clockwise and 255 degree counterclockwise). The rotation is stopped by the **Stopper** inside of the camera. For panning control, first unfasten two screws located on the bottom and rotate in the direction you want, and then fasten them to fix the camera.

In case of tilting, you can change the slope of your camera from zero to 90 degree. However if the slope angle is under 17 degree, you can encounter a partial image hide problem. To fix the location after adjusting the tilting angle, use the **Tilt fixing screws**.

To adjust the focus and zoom of your camera, use the **Zoom lever** and **Focus lever**. When you install the camera on the inclined ceiling or wall, you can rotate the camera lens to see a correct direction image.

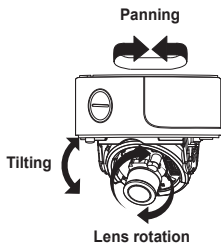

SCC-B539X

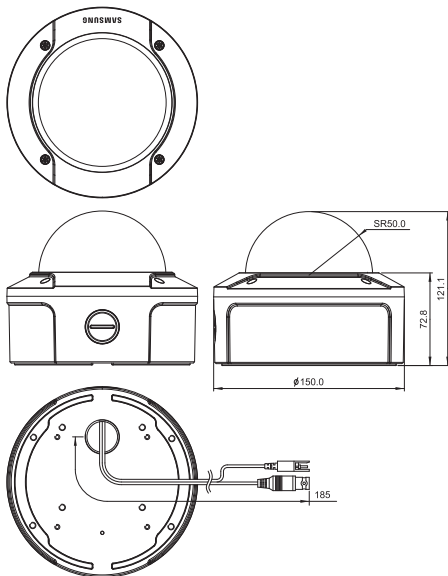

Appendix A: Specifications for NTSC Standard

Item	Details				
Product type	CCTV color dome camera				
Power input	AC 24V ± 10% (60Hz ± 0.3 Hz), DC 12V +10%/-5%				
Broadcast type	NTSC Standard System (525 Lines, 60 Fields)				
Power consumption	Approx. 1.7W				
Image device	1/3 inch IT Type Super-HAD CCD				
Pixels	Total: 811(H) x 508(V), 410,000 pixels Effective: 768(H) x 494(V), 380,000 pixels				
Scanning mode	525 Lines, 2:1 Interlace				
Scanning line frequency	Horizontal: 15.734Hz(INT)/15.750Hz(LL) Vertical: 59.94Hz(INT)/60Hz(LL)				
Synchronization mode	INT/Line Lock (Adjusting the phase using INC/DEC button)				
Horizontal resolution	540 TV Lines				
Min. object illumination	F1.2	Sens-up Off	SCC-B53X3 (Color/BW)	SCC-B53X2 (Color/BW)	
			50IRE	0.4/0.04Lux	0.4/0.4Lux
			30IRE	0.24/0.024Lux	0.24/0.24Lux
		Sens-up x128	15IRE	0.12/0.012Lux	0.12/0.12Lux
			50IRE	0.0031/0.00031Lux	0.0031/0.0031Lux
			30IRE	0.0019/0.00019Lux	0.0019/0.0019Lux
Signal output	COMPOSITE Video(1.0 Vp-p, 75ohm, BNC), Test Monitor OUT(1.0 Vp-p, 75ohm, Harness cable)				
Lens	Auto Iris (DC) Focal length: 2.5 to 6.0mm Aperture ratio: 1.2				
PAN function	Range: 0 to 355° (100 degree clockwise and 255 degree counterclockwise)				
TILT function	Range: 0 to 90°				
Controls	Line Lock (LL) Sens-Up; Low Speed Shutter(LSS) Horizontal Reverse (H-REV) Vertical Reverse (V-REV) Backlight compensation (BLC) Flickerless (FL) Switching between color and B&W modes (D/N) Auto white balancing (AWB) Digital noise reduction (DNR) Dynamic CCD defect compensation				
Operation temperature	-10°C to +50°C				
Operation humidity	Up to 90%				
Size	150(Ø) x 121(H)mm				
Weight	SCC-B539X: 1.1kg				

Appendix B: Specifications for PAL Standard

Item	Details				
Product type	CCTV color dome camera				
Power input	AC 24V ± 10% (50Hz ± 0.3 Hz), DC 12V + 10%/-5%				
Broadcast type	PAL Standard System (625 Lines, 50 Fields)				
Power consumption	Approx. 1.7W				
Image device	1/3 inch IT Type Super-HAD CCD				
Pixels	Total: 795(H) x 596(V), 470,000 pixels Effective: 752(H) x 582(V), 440,000 pixels				
Scanning mode	625 Lines, 2:1 Interlace				
Scanning line frequency	Horizontal: 15.625Hz(INT)/15.625Hz(LL) Vertical: 50Hz(INT)/50Hz(LL)				
Synchronization mode	INT/Line Lock (Adjusting the phase using INC/DEC button)				
Horizontal resolution	540 TV Lines				
Min. object illumination	F1.2	Sens-up Off	50IRE	SCC-B53X3 (Color/BW)	SCC-B53X2 (Color/BW)
			30IRE	0.4/0.04Lux	0.4/0.4Lux
			15IRE	0.24/0.024Lux	0.24/0.24Lux
		Sens-up x128	50IRE	0.12/0.012Lux	0.12/0.12Lux
			30IRE	0.0031/0.00031Lux	0.0031/0.0031Lux
			15IRE	0.0019/0.00019Lux	0.0019/0.0019Lux
Signal output	COMPOSITE Video(1.0 Vp-p, 75ohm, BNC), Test Monitor OUT(1.0 Vp-p, 75ohm, Harness cable)				
Lens	Auto Iris (DC) Focal length: 2.5 to 6.0mm Aperture ratio: 1.2				
PAN function	Range: 0 to 355° (100 degree clockwise and 255 degree counterclockwise)				
TILT function	Range: 0 to 90°				
Controls	Line Lock (LL) Sens-Up; Low Speed Shutter(LSS) Horizontal Reverse (H-REV) Vertical Reverse (V-REV) Backlight compensation (BLC) Flickerless (FL) Switching between color and B&W modes (D/N) Auto white balancing (AWB) Digital noise reduction (DNR) Dynamic CCD defect compensation				
Operation temperature	-10°C to +50°C				
Operation humidity	Up to 90%				
Size	150(Ø) x 121(H)mm				
Weight	SCC-B539X: 1.1kg				



Correct Disposal of This Product

(Waste Electrical & Electronic Equipment)

(Applicable in the European Union and other European countries with separate collection systems)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

